


# Raise your expectations

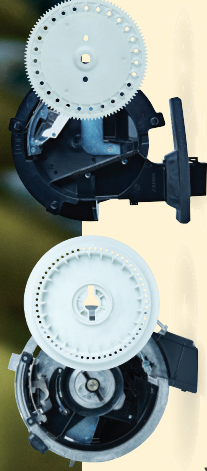

Precise spacing boosts yield, and your meters are the linchpin. If you're currently running original vac or finger meters, you can do better. Much better.

Replace what you have with **eSet™** (for Deere planters) and **vSet™** (for EdgeVac® or finger meter planters). Singulation will typically improve 5% or more. Yield? Ditto. Bank the extra bushels.

Our meters handle all seed shapes and sizes without fussy vac, disk or singulator settings. Just pour in the seed and go.

**Expect more. Come in and secure your new meters today. Be sure to ask about all our tools for managing spacing, depth and germination.**



spacing depth germination  
Precision Planting pays

YIELD IS IN THE DETAILS.  
**Precision**  
PLANTING

EdgeVac is a registered trademark of Kinze Manufacturing, Inc.

